


1

CLEAN THE SURFACE


REMOVE ANY DIRT, DUST,
GREASE OR GOO.

2

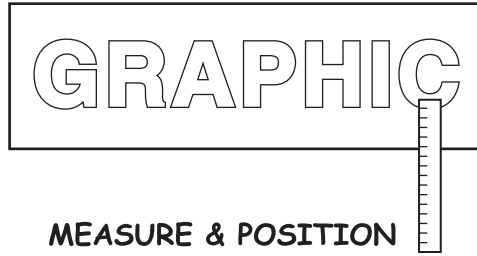


MEASURE & POSITION

3

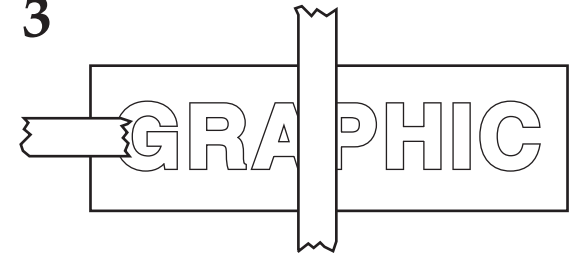


LOCK INTO PLACE

4

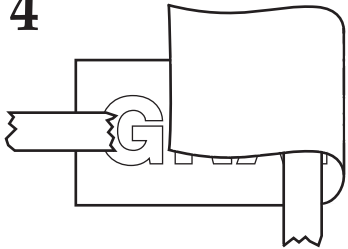


BEND BACK FREE SIDE

5

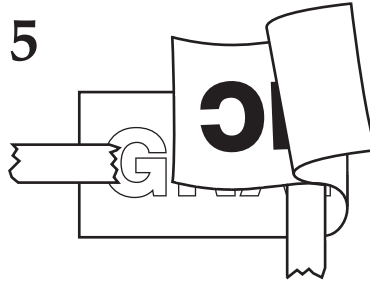


PEEL BACK RELEASE LINER

6

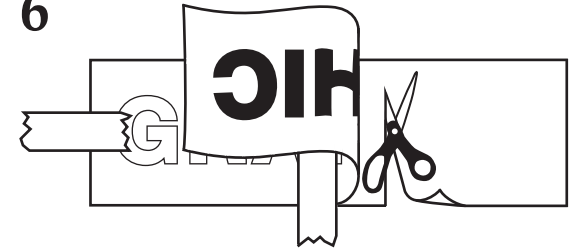


TRIM AWAY RELEASE LINER

7

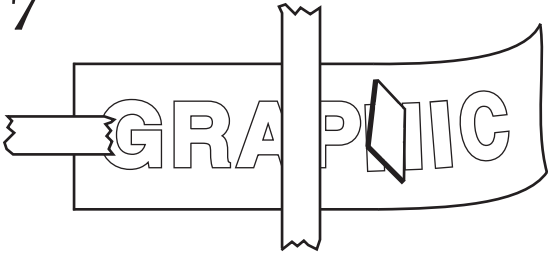


SQUEEGEE DOWN

8

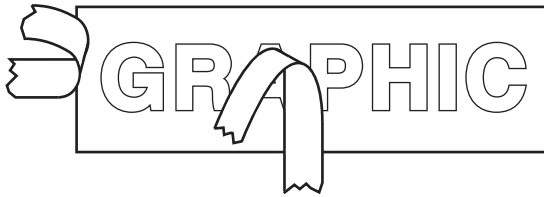


REMOVE TAPE STRIPS

9

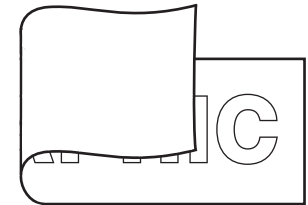


BEND BACK REMAINING FREE SIDE

10

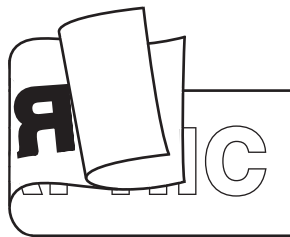


PEEL AWAY RELEASE LINER

11

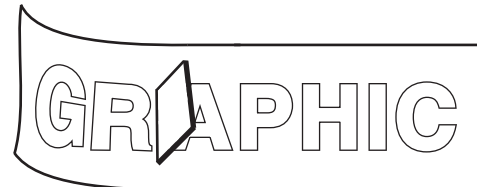

SQUEEGEE DOWN

12

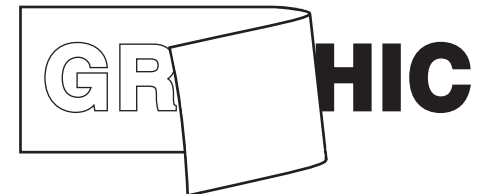

PEEL AWAY TRANSFER PAPER